



Smart Human Presence Detector

User Manual



Please read this manual carefully before use and keep it for future reference.

Thank you for purchasing and using this product.

Before using the product, please read the manual carefully and use the product correctly. In order to avoid damage to the equipment, such as all consequences caused by abnormal operation, the company will not bear any responsibility.

The pictures in this manual are used to guide the user's operation and are for reference only. Please refer to the actual product for details.

Product parameter

Model	LT-AZ73
Operating voltage	DC 5V / 1A


Packing list

Host machine ×1	USB Type-C cable ×1
Manual ×1	Mounting bracket ×1
Double sided adhesive block ×1	

Additional Parameters

Illuminance value	0-3000 Lux
Stationary detection range	0-600 cm
Moving detection range	0-800 cm
Detection Angle	>90°
Communication	Zigbee 3.0 / 2.4G Wi-Fi (Optional)

Product description

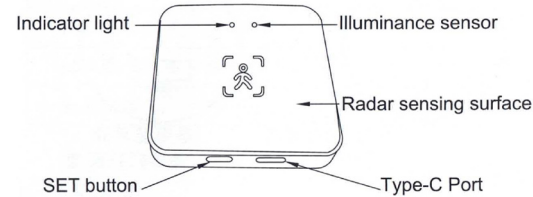

Download & Install the APP

1. Go to your App Store & search the "Smart Life" & install the app.
2. Input account name and password to login. If you don't have an account, please register an account first. System will identify your country automatically. You can use your mobile phone number as your account name.
3. Tap on "Next" to get a verification code via SMS on your mobile phone. Enter a desired password.
4. Tap on "Confirm" to finish your registration.

Binding device description

- If the device is Zigbee, it must have a Zigbee gateway.

For details, see Zigbee Gateway Instruction manual, first bind Zigbee gateway to App.

- Power on the device, if the device indicator light flashes rapidly, it indicates that it has entered the join network mode (broadcast mode).


Otherwise, long press SET BUTTON until the indicator light flashes rapidly.

- If the device is Zigbee, it must have a Zigbee gateway, and put the Zigbee gateway into device discovery mode.

Installation instructions


Ceiling installation

1. Secure the mounting bracket to the ceiling using screws.
2. Buckle the device into the mounting chassis, rotate to secure it, press the mounting chassis into the support, and tighten it, as shown in the diagram on the right.
3. Adjust the radar sensing surface angle and align it with the area to be detected.

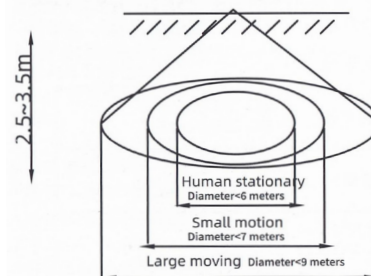

Side wall installation

1. Fix the product on the wall with double-sided block.
2. Press the installation chassis into the bracket.
3. Adjust the radar sensing surface angle and align it with the area to be detected.

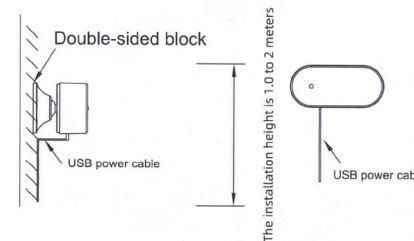

Special note!

1. Do not expose radar sensing to jamming devices such as quasi-wireless routers.
2. You can set radar parameters on the APP according to the field environment, adjust the sensor detection distance.

Contact Information



Ledgebit Technologies Private Limited,
401, Vipul Trade Center, Sec 48,
Gurugram, Haryana 122018



www.ledgebit.com



sales@ledgebit.com



+91-9810320256