


User manual

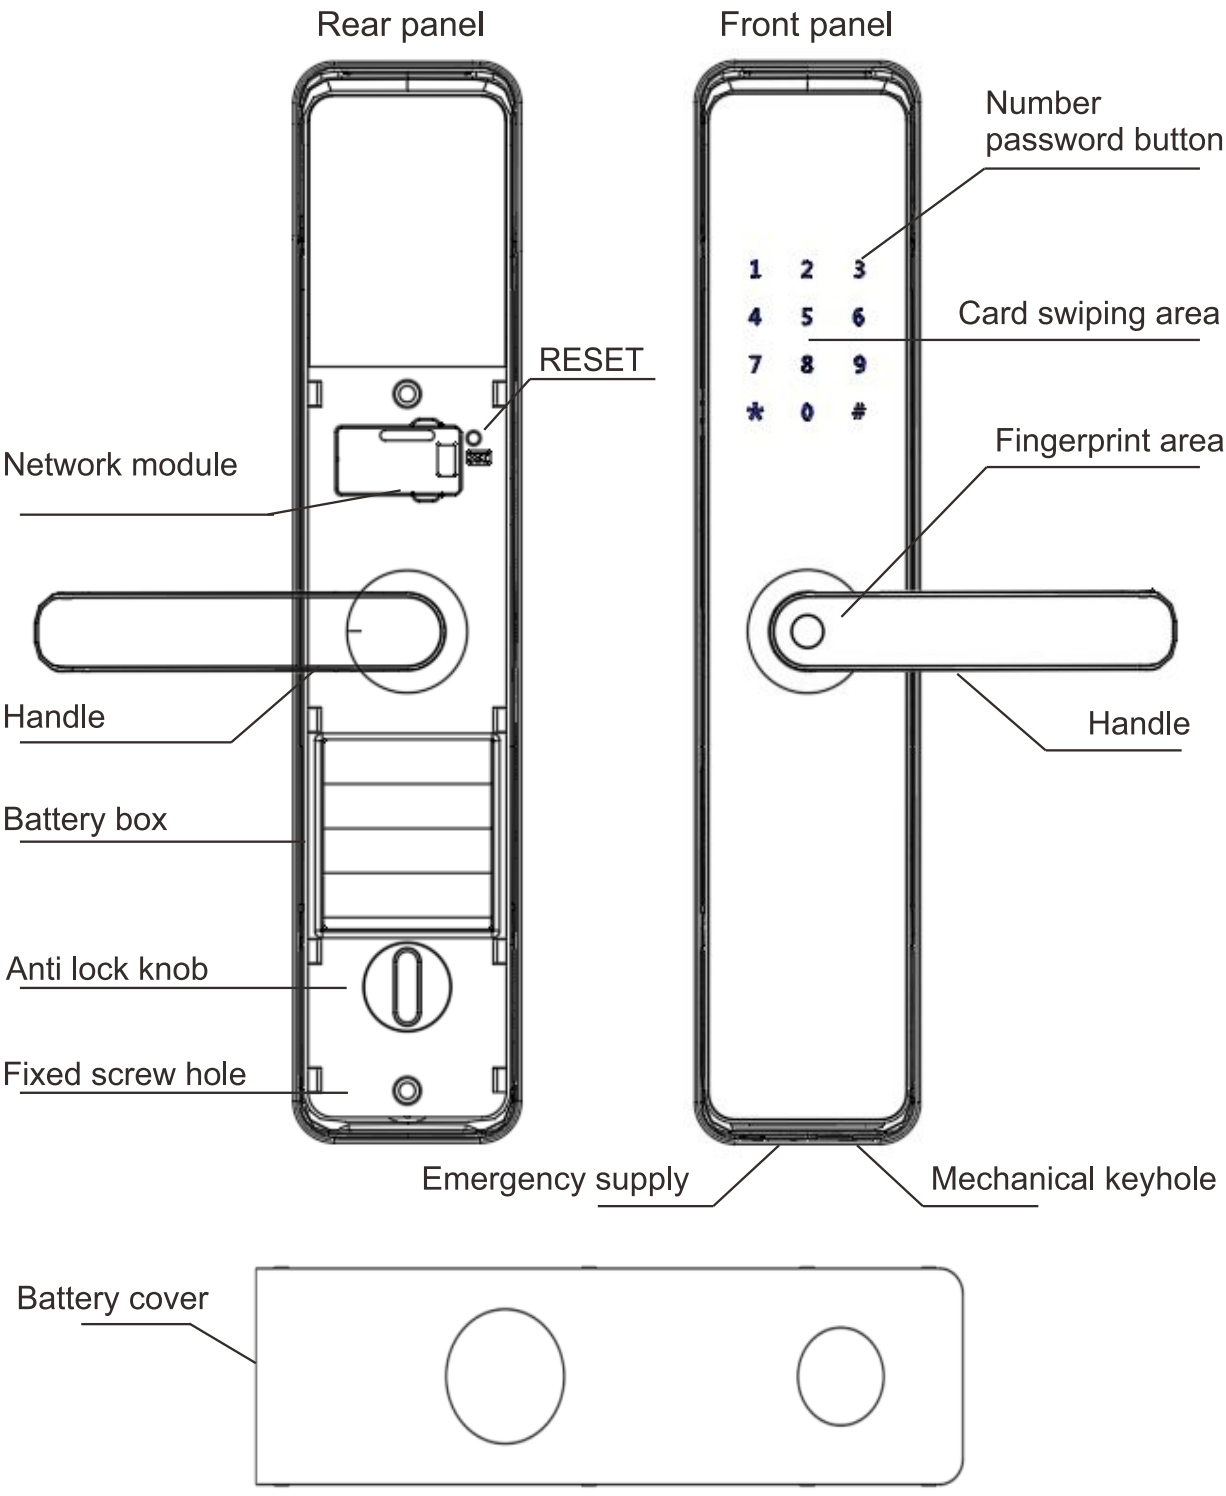

Note: Please keep the interior of the lock panel clean during installation

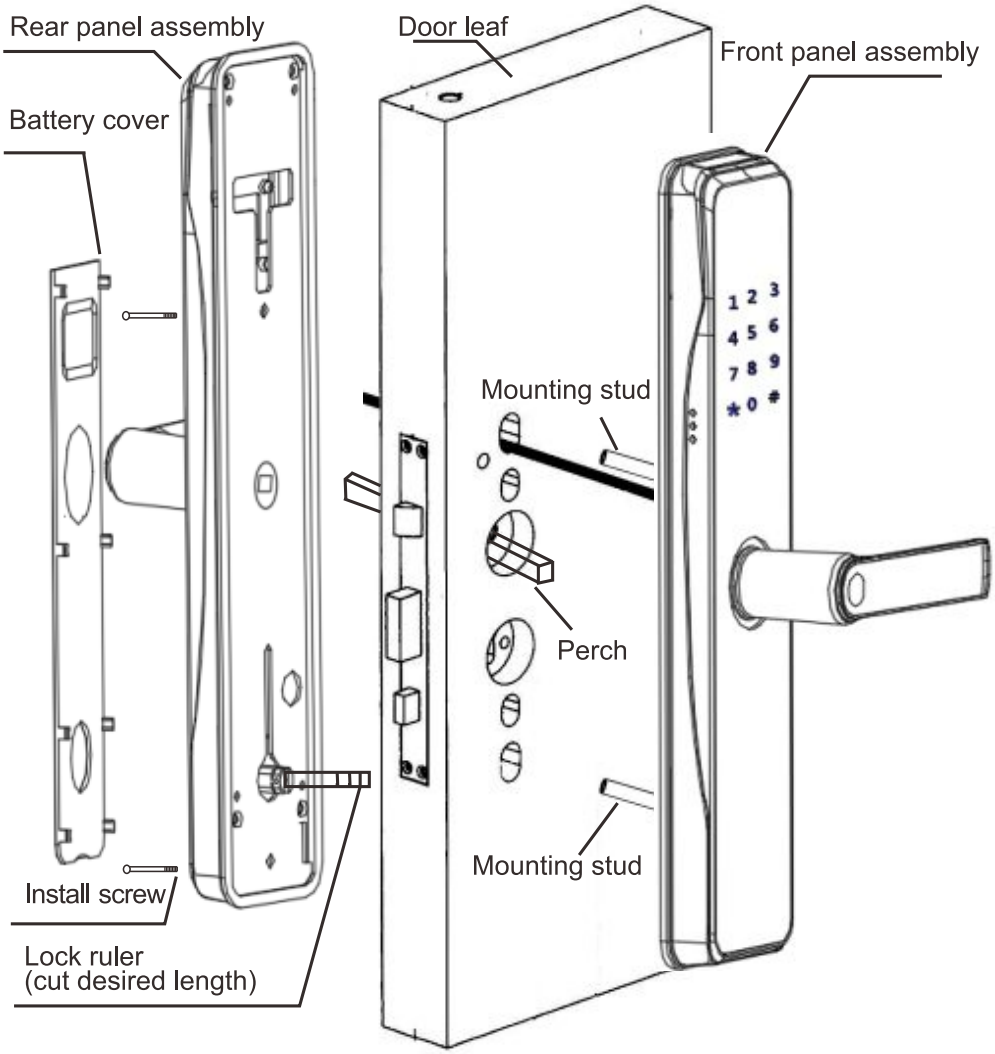

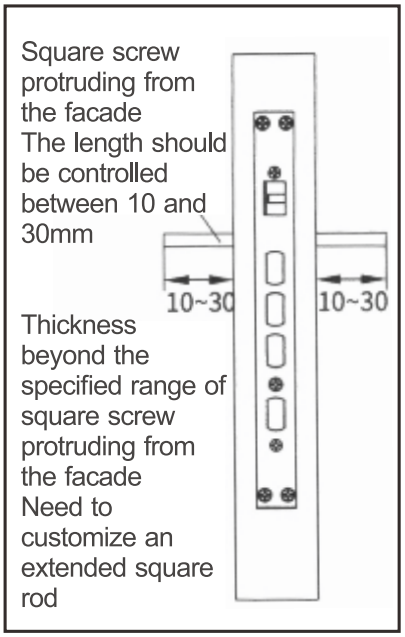

Paneland lock body installation procedure:

1. Adjust the lock tongue direction: Change the lock tongue direction of the lock body according to the opening mode.

2. Installation of the lock body: insert the lock body into the opening of the lock body installation hole, tighten the lock body installation screw.

Panel mounting:

(1) According to the direction of opening the door, the lock handle is reversed.

(2) installed the stud on the front panel and tighten it, at the same time the spring into the rear panel of hand tower;

(3) the accessories in the package of the rod inserted into the lock body side hole (square bar by cutting according to the actual door thickness).


(4) data cables from installed stud out of the hole in the door of the past, hold hand square hole and square bar alignment, close to the front panel components appearance.

(5) the data cable to the rear panel cable socket.

(6) square hole on the side panel of hand lever, after locking bar on the lock body lock foot hole, close to therear panel components inside the facade. All landowners twist panel mounting screws until the panel is a lttlehard to move on, If not smooth the adjustments panel, lock tongue can smoothly after tighten, panel mountingscrews was equipped with batteries, try the fingerprint lock or enter the initial password to unlock, if the locktongue activity fails to smooth the step.


(7) if the battery cover validation no problem will be installed, complete the installation.

Handle reversing

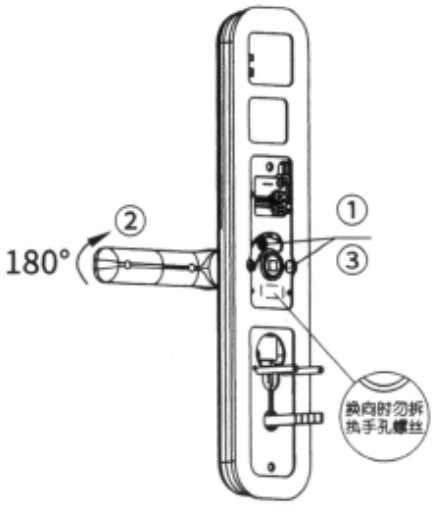

1. Loosen the handle reversing screw
2. Rotate the handle 180 ° above the lock
3. Rotating commutator
4. Fix the reversing screw to complete the reversing process

Lock body reversing

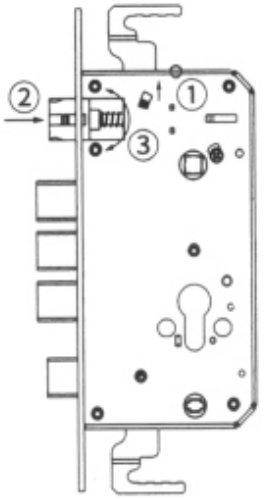

1. Move the reversing paddle upwards;
2. Press the oblique tongue in;
3. Rotate the inclined tongue 180° to reverse;

Product layout:

■ Door opening method: fingerprint, password, IC card, mechanical key, wechat mini program and other ways to open the door, bring you a different door experience (specific configuration subject to the actual);

■ Fingerprint: advanced semiconductor sensor, 360-degree recognition Angle, wide fingerprint acquisition area, high resolution, effectively prevent false fingerprints;

■ Password: Using the fashionable and advanced touch screen key technology, it can add 12 irrelevant passwords before and after the correct password, effectively preventing the embarrassment of entering the password when many people walk together;

■ Dual verification mode: fingerprint, password and card can be set to verify the lock, only two users can be verified at the same time to open the door, suitable for special occasions;

■ User management: The administrator has the highest authority (ordinary users can only open and close the door operation), can edit and set the lock, the number of administrators is 9 (can be fingerprint, password, card), the total capacity of 300;

■ Alarm function: the machine has anti-warp alarm, low-voltage alarm, trial and error alarm;

■ Standby power supply: When the battery is exhausted, the use of 5V mobile power supply can be emergency power supply to the door lock;

Matters needing attention:

1. After the new lock is installed, restore the initialization operation to clear the fingerprints recorded during installation and debugging.

2. The handle is a key part of opening and closing the door, and its flexibility directly affects the use of the door lock,so do not put it again Hanging objects from one's hands;

3. When collecting fingerprints, the finger strength is moderate, do not exert strong pressure, to prevent the fingerprint collection head scratch;

4. The battery should not be used for too long, it is generally recommended to change the battery at least once in half a year, otherwise the battery leakage will damage the smart lock;

5. The lock uses 4 5 (1.5V) high-performance alkaline batteries, when the first "insufficient power, please replace the battery", according to the different battery capacity can also open the door about 100 times, at this time should be replaced in time, so as not to cause inconvenience due to battery exhaustion;

6. If the fingerprint/card/password is entered incorrectly for 5 times, the alarm will be sounded, and the door lock cannot be used within 90 seconds;

Product layout:

■ Initialization operation:

Remove the battery cover, press the "SET" button next to the battery case on the rear panel, hold for 5 seconds, and the voice message" Initialization succeeded.

Administrator Settings:

Under the conventional state
"*" Return to key / exit key / delete key
"#" Confirmation key / input key / repeat voice broadcast

press the"*#"

⇩

You need to verify the administrator everytime you enter the function management

⇩ ⇩

Press"1" to add user information , which you can record Enter the fingerprint,the password, or the card

⇩

After the operation is successful, press"*" to return to on or continue to delete the user

⇩

After the operation is successful,press"*"to return to on or continue to delete the user

Press"2" to delete the user information

⇩

Enter the fingerprint, password, card, ornumber of the user that you want todelete

⇩

After the operation is successful,press"*" to return to on or continue to delete the user

User Settings:

Under the conventional state

"*" Return to key / exit key / delete key

"#" Confirmation key / input key / repeat voice broadcast

Press “*+#"

Validation administrator

Press "1" to add user information, you can input fingerprint/password/card.


After the operation is successful, press * to return to the previous step or continue to add common users

Press "2" to delete user information

Enter the fingerprint/password/card/number of the user you want to delete


After the operation is successful, press * to return to the previous step or continue deleting the user

Factory data reset:

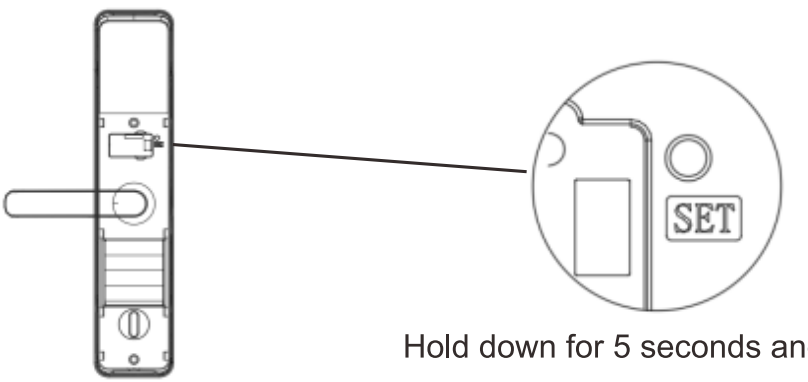

Hold down for 5 seconds and release

Lock Settings:

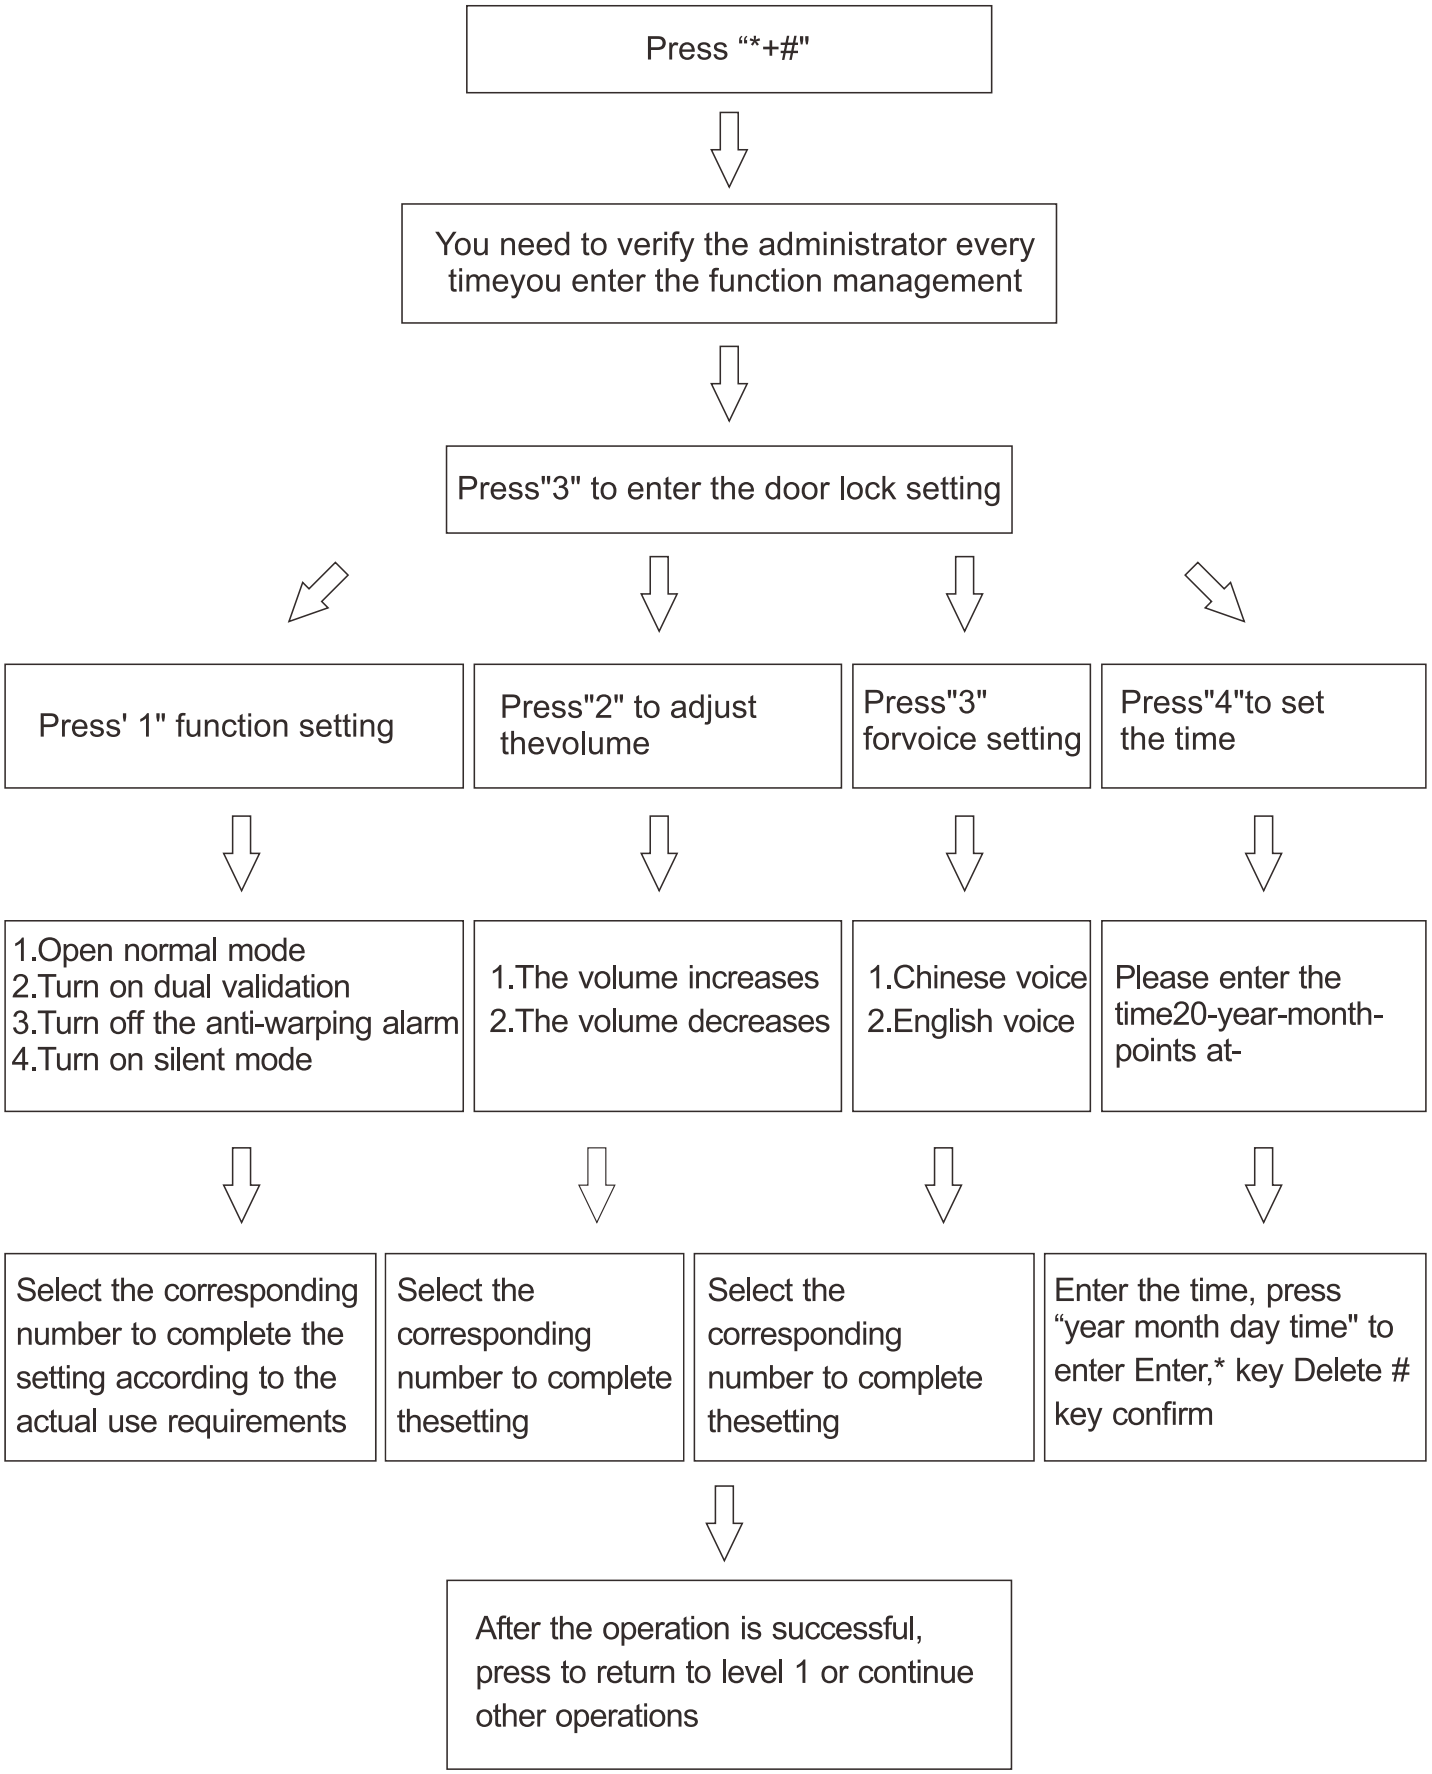

Other notes:

(1) If you enter the wrong password for more than 5 consecutive times, the keyboard will be locked for 3 minutes, and the system will not respond to any operation within 3 minutes;

(2) Password anti-snooping function: Enter the password as follows when opening the password: XXX password XXX; You can add some irrelevant codes before and after the password, then press # to confirm. The password must be included in the input; Each operation more than 10 seconds without operation action, the system will automatically exit;

(3) After the voltage is lower than 4.8V each unlocking will automatically alarm, alarm door lock can be unlocked 100 times, more than the number of times will prohibit unlocking, be sure to replace the new battery before unlocking;



Wechat sweep, small program open the door

Note: It can only be used after setting the fingerprint lock time and administrator digital password.